


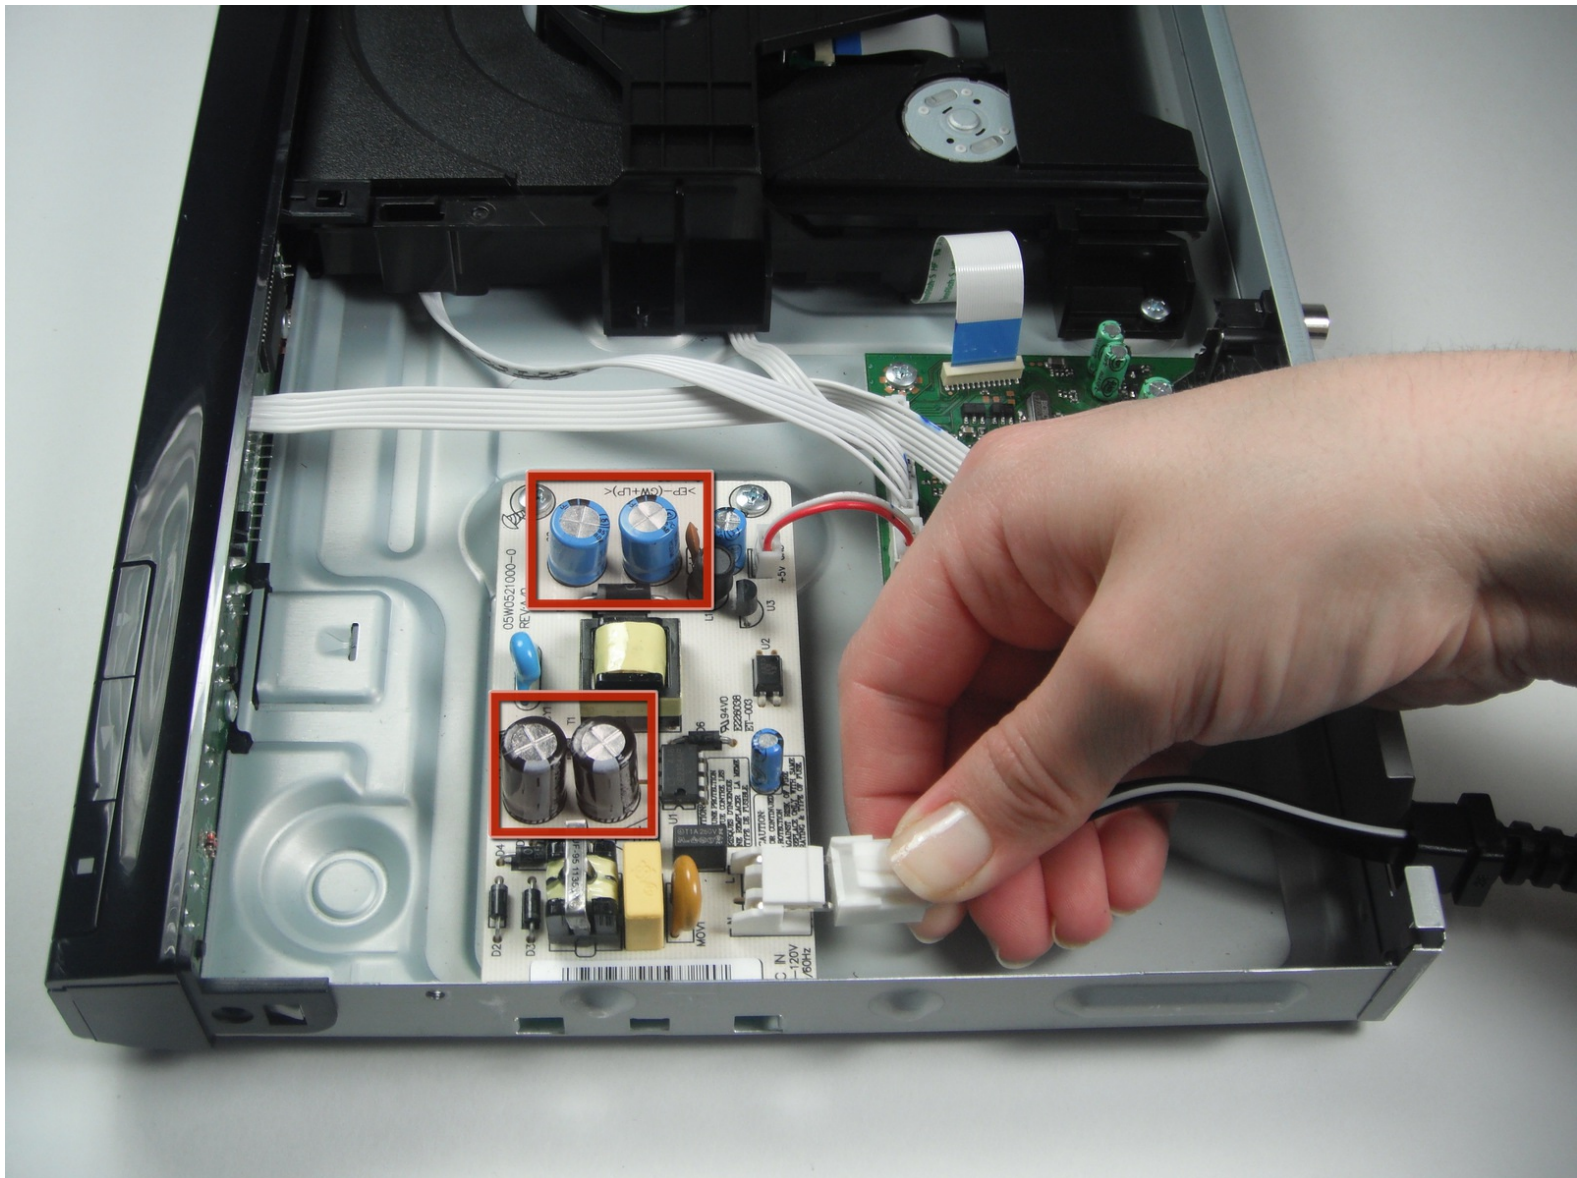

Sony DVP-SR200P Power Supply Circuit Board Replacement

Follow this guide in order to remove and replace the power supply circuit board.

Written By: Brian Hua



INTRODUCTION

This installation guide allows you to remove the power supply circuit board and power cable.



TOOLS:

- [Tweezers](#) (1)
 - [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Top Cover



- Remove the five #1 Phillips screws (black, 3/16") attaching the cover to the DVD player.
 - One 3/16" screw on the right side of the DVD player.
 - One 3/16" screw on the left side of the DVD player (directly opposite of other screw).
 - Three 3/16" screws on the back of the DVD player.

Step 2





- Slide the cover away from the front of the DVD player until it is off.

Step 3 — Processing Board




- Remove the blue tape from the processing board by gently pulling upward.

Step 4

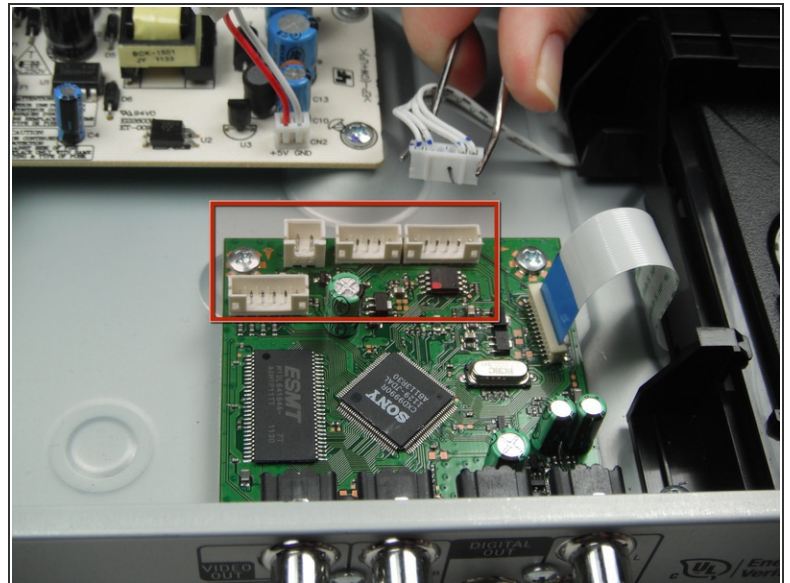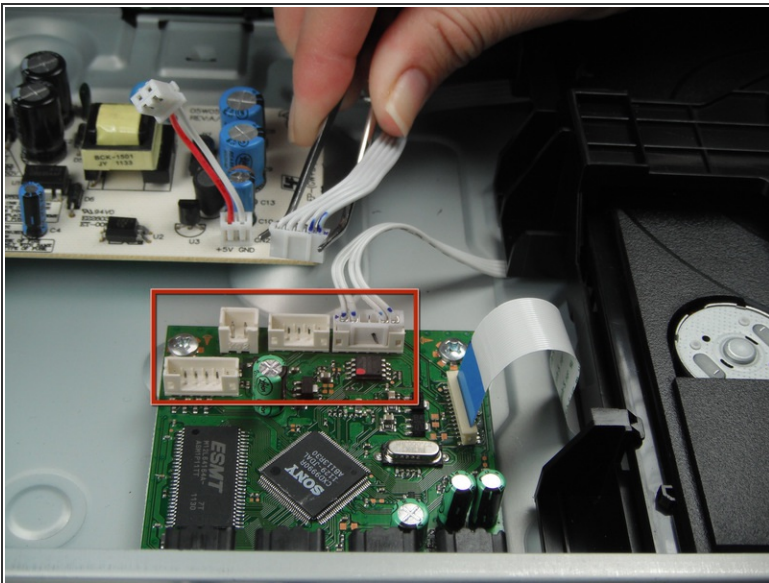

- Use the tweezers to remove the four sets of wires connected to the processing board. Start with the cord located in front of the row of three cords.
- ⓘ The wires may be difficult to remove. Wiggling them while lifting them up may help remove them.

Step 5

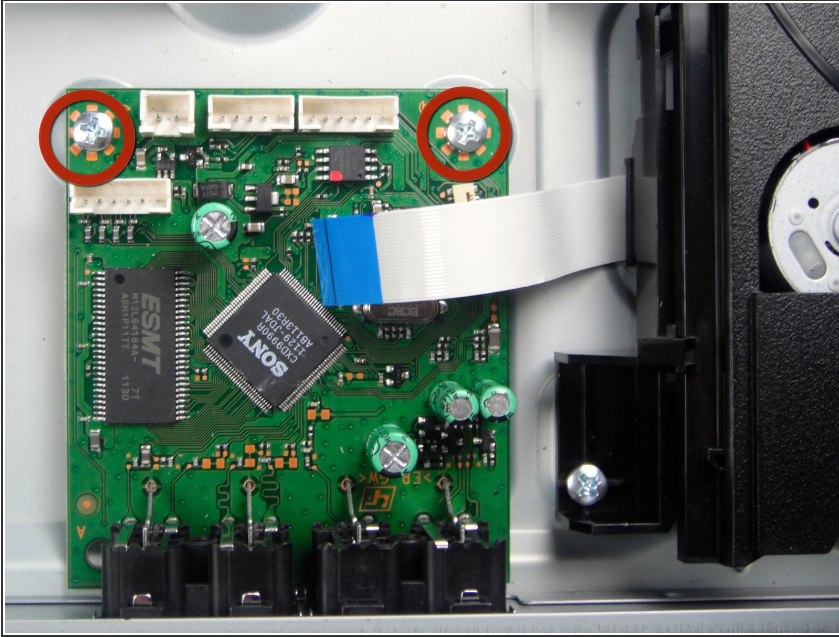

⚠ Handle the processing board with care. It is fragile.


- Unscrew the two #1 Phillips screws (silver, 3/16") located on the two edge corners of the processing board.


Step 6



- Orient the DVD player so that you are facing the video and audio jacks.
- Unscrew the two #1 Phillips screws (silver, 3/16") located on the outside of the DVD player
- ⓘ The processing board is now free to be removed and replaced.


Step 7 — Power Supply Circuit Board

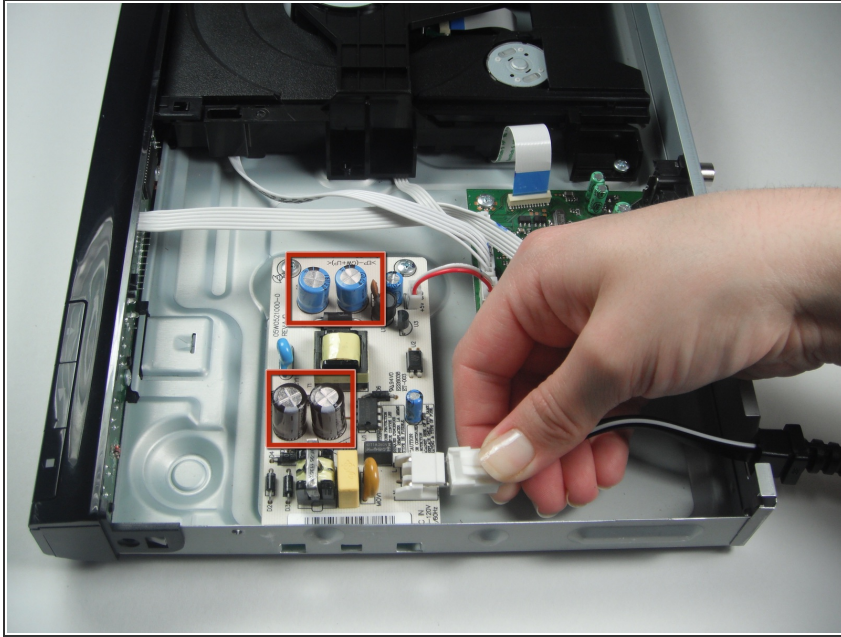

 Beware of the capacitors.

- The capacitors may shock you if touched.
- Unhook the power supply connector from the power supply board by pressing down on the small latch.

Step 8

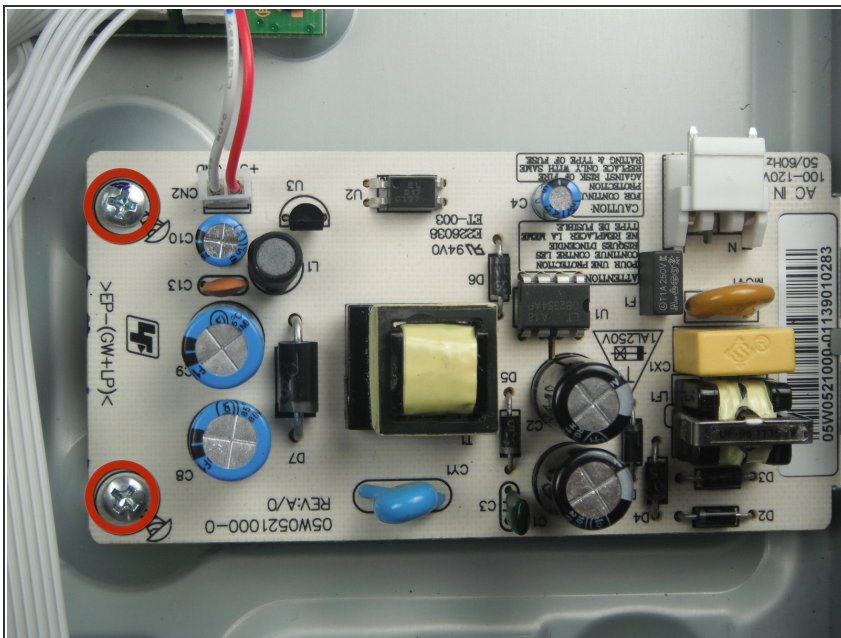

- Orient the DVD player so the back of the DVD player is opposite of you.
- Unscrew the two #1 Phillips screws (silver, 3/16") that attach the power supply circuit board to the bottom of the DVD player.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-18 09:13:49 PM.